

Removing Paired Devices from a Caséta Wireless Dimmer

1 Tap the "On" button quickly three times, holding on the last press

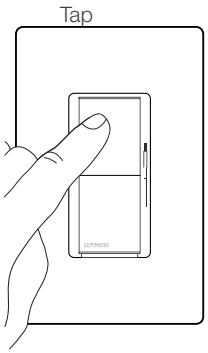


3x

2 Continue to hold the "On" button until the light begins to flash quickly.

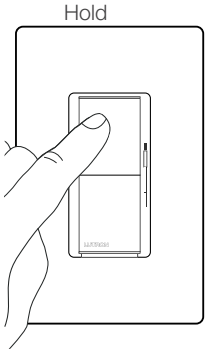




Until

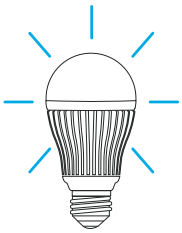


Light starts flashing quickly

3 Release the button, then immediately tap the button three more times

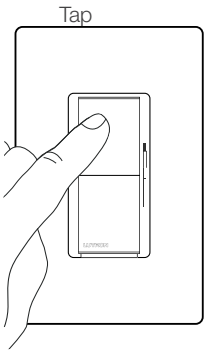

3x

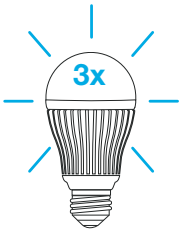

Light will flash slowly three times, then turn off

4 All paired remotes are removed and all settings are returned to factory default.

– After the dimmer resets, the light will turn on to the full on state.

Note: This procedure also resets the high-end and low-end trim settings.

LUTRON

© 09/2021 Lutron Electronics Co., Inc.